



Accessories & Installation



BT-CS01/BT-CS02
4*42mm
Stainless steel self-drilling screws



BT-DB01
50mm
Stainless steel drill bit



BT-SP01
205*140*70mm
Metal side screw positioner




BT-SP02
205*100*55mm
Metal middle screw positioner



BT-J01
50*50mm
Foamed PE joist



BT-BN01
100*25*2440mm
Bullnose board

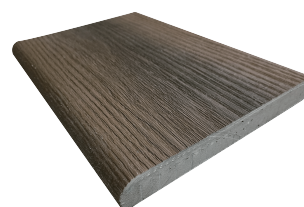

BT-BN02
200*25*2440mm
Bullnose board



BT-J02
40*60mm
Foamed PE joist




BT-SC01
150*15*2400mm
Side cover



BT-SC02
150*18*2400mm
Side cover




BT-PO01
200 ml
Coating oil

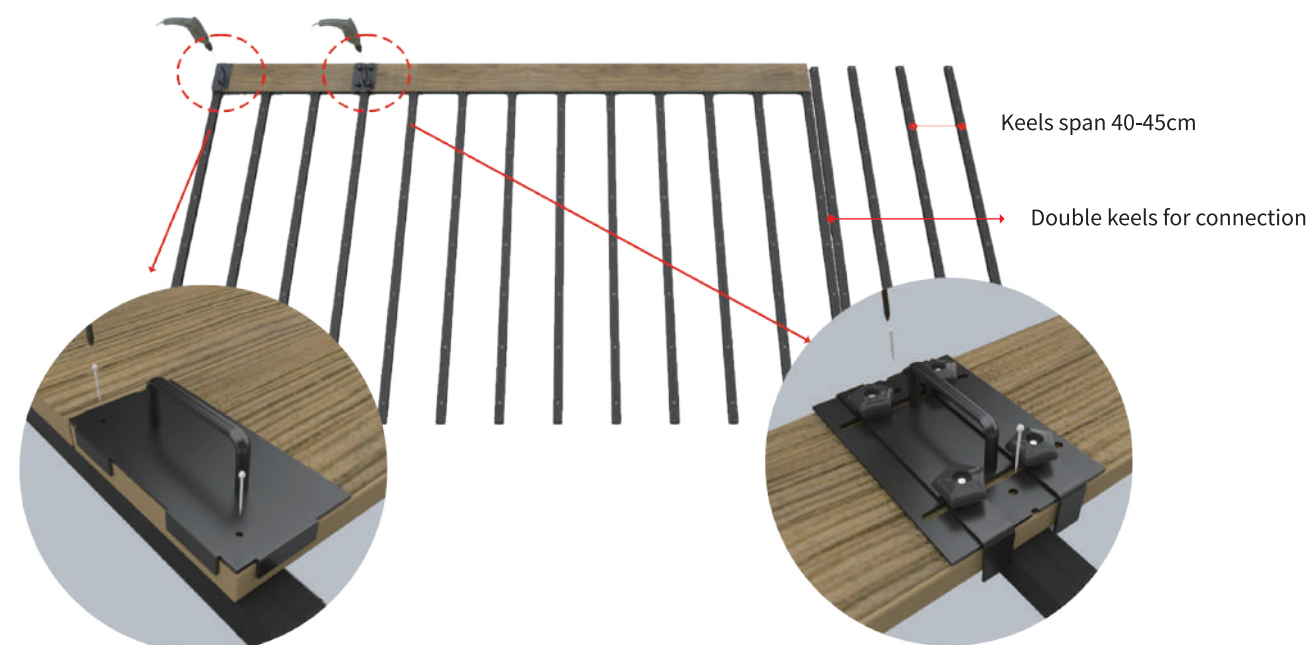

Driving screws through the holes of the side screw positioner

By using the middle screw positioner to fix the decking onto the joists in the middle

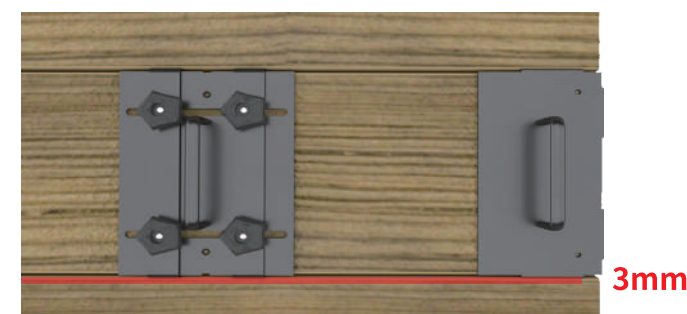

Both screw positioners keep 3mm space between the decking boards




The decking boards can be easily cut with an electric saw to wanted length.



The cutting section can be painted with Welltouch coating oil




Align the decking boards and fix them with the screws

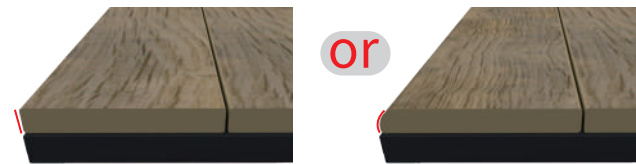


Repeat the steps till the whole installation is completed

The ending piece can be either Welltouch decking board with a vertical fringe or Welltouch bullnose board with a curved fringe

Bullnose board

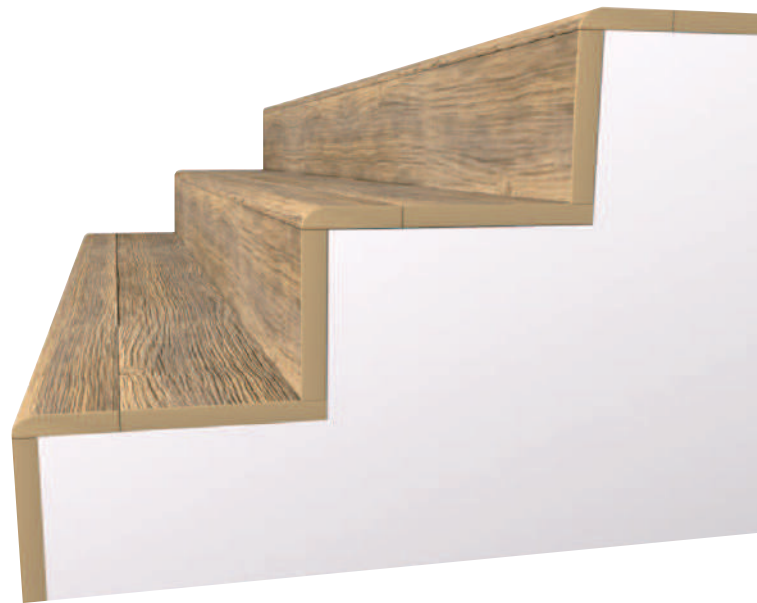

Curved edge

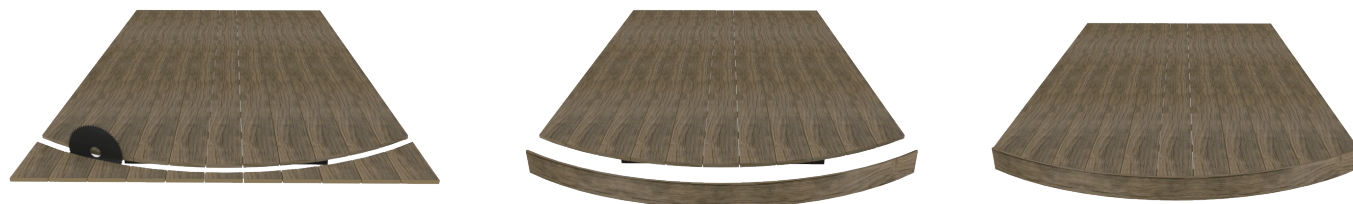

In case you want to shape a curved perimeter, BT-SC01 and BT-SC02 can be bent to obtain an aesthetic appearance



WELLTOUCH BOARD WELL-BEING WORLD

To reduce deforestation, to recycle wasted materials, and to build a greener world.

